 


# NetworkAIR<sup>®</sup> IR Plenum Kit — Installation

## Inventory




Screw — M6-1 × 12, tapping (2)




M6 Flanged Hex Nut (2)



M6 Serrated  
Lock Washer (4)

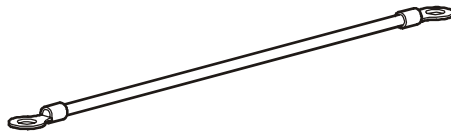

24-inch ground wire (2)

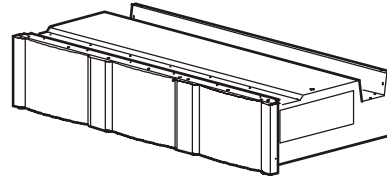


Plenum (1)



For safety, use at least two people to move and install the plenum.

## Tool required (provided)

 

T 30 Torx<sup>®</sup> bit


## Install the plenum




**Heavy**

Lifting and placement of the plenum requires at least two people.

1. Place and center the plenum on top of the NetworkAIR Module.

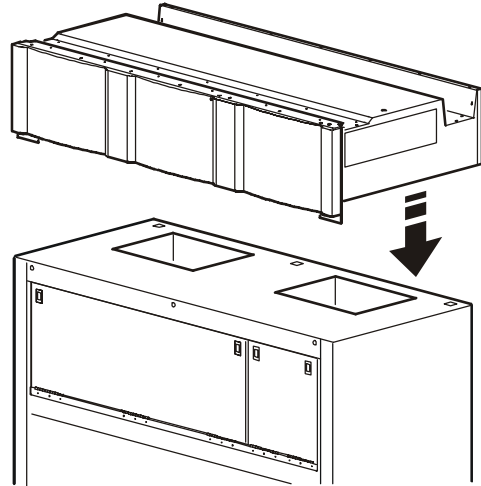


2. Install two (2) M6-1 × 12 tapping screws through the front flange of the plenum and into the module.

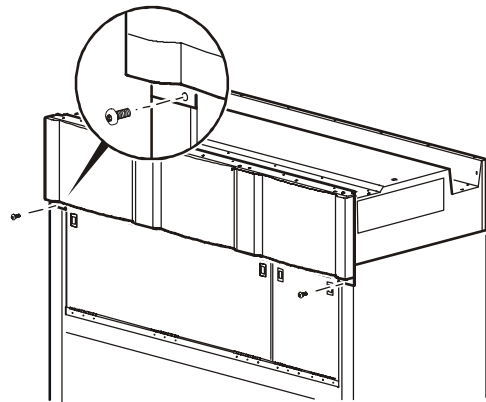


## How to ground the plenum

The plenum ships from the factory with grounding screws and washers fastened in place.


1. Remove the screws and washers, and save them for attaching the grounding wires to the plenum.

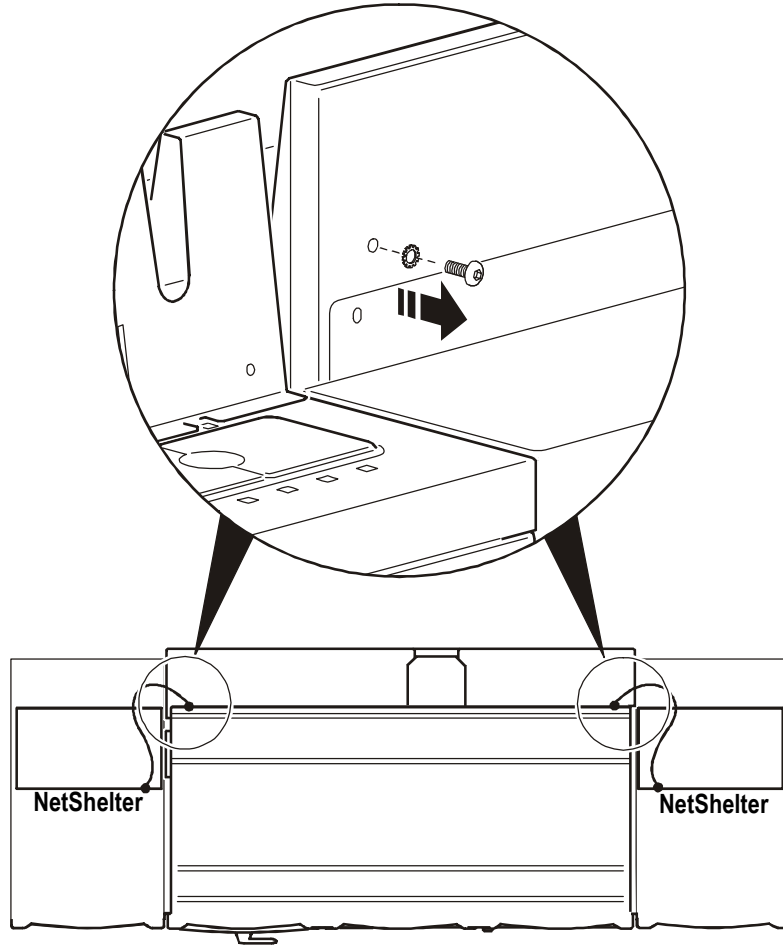

2. Attach one end of a ground wire (provided) to the plenum using the previously removed screw and washer, along with one new washer (provided). Route the ground wire over the shielding trough.
3. Repeat step 2 for the other end of the plenum.

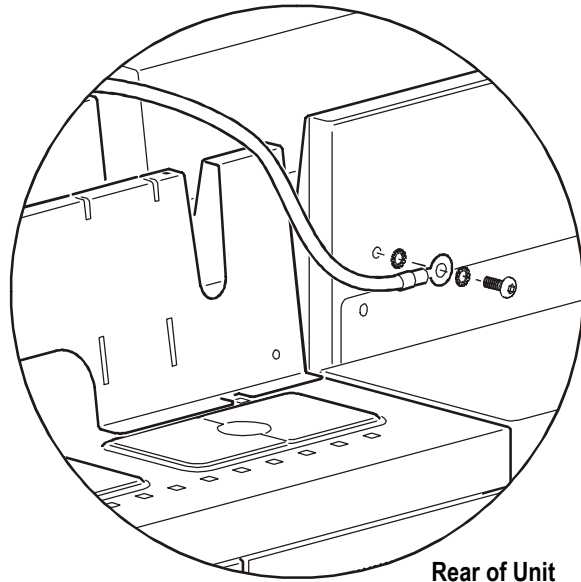

4. Attach the free end of the ground wire to a ground stud on the shielding trough, and secure it with two (2) M6 washers and one (1) M6 nut (provided) as shown.
5. Repeat step 4 for the other side of the plenum.

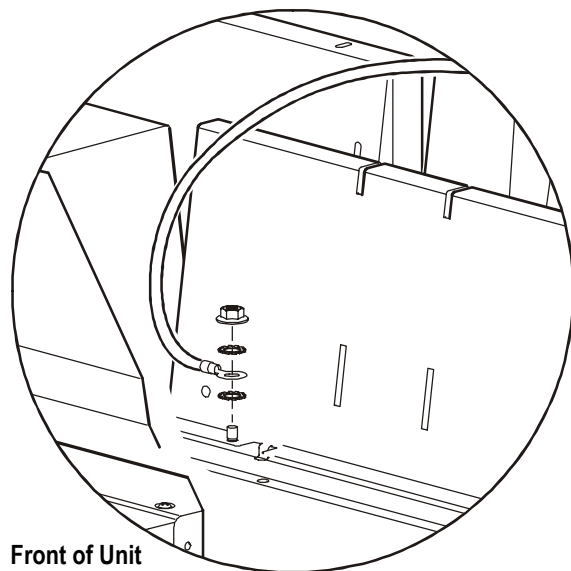

## APC Worldwide Customer Support

Customer support for this or any other APC product is available at no charge in any of the following ways:

- Visit the APC Web site to access documents in the APC Knowledge Base and to submit customer support requests.
  - **www.apc.com** (Corporate Headquarters)  
Connect to localized APC Web sites for specific countries, each of which provides customer support information.
  - **www.apc.com/support/**  
Global support searching APC Knowledge Base and using e-support.
- Contact an APC Customer Support center by telephone or e-mail.
  - Regional centers:

Direct InfraStruXure Customer Support Line	(1)(877)537-0607 (toll free)
APC headquarters U.S., Canada	(1)(800)800-4272 (toll free)
Latin America	(1)(401)789-5735 (USA)
Europe, Middle East, Africa	(353)(91)702000 (Ireland)
Japan	(0) 3 5434-2021
Australia, New Zealand, South Pacific area	(61) (2) 9955 9366 (Australia)

- Local, country-specific centers: go to **www.apc.com/support/contact** for contact information.

Contact the APC representative or other distributor from whom you purchased your APC product for information on how to obtain local customer support.

To obtain a repair authorization number for a NetworkAIR product, call APC NetworkAIR technical services between 8:00 A.M. and 5:00 P.M. Eastern time, Monday through Friday:

- Phone: (1)(888)695-6500 (USA and Canada only, toll free)
- Fax: (1)(401)788-2691

Entire contents © 2005 American Power Conversion. All rights reserved. Reproduction in whole or in part without permission is prohibited. APC, the APC logo, NetworkAIR, InfraStruXure, and NetShelter are trademarks of American Power Conversion Corporation and may be registered in some jurisdictions. All other trademarks, product names, and corporate names are the property of their respective owners and are used for informational purposes only.

