

## Installation Requirements for Capacity Manager and Change Manager

### IMPORTANT

- Prior to installing the Capacity Manager client, the Change Manager client or the Change Manager Mobile client, the Capacity Manager or Change Manager license keys have to be registered on the InfraStruXure Central server (either Basic, Standard or Enterprise version).
- If no valid license keys are entered, the Capacity Manager or Change Manager client will install, but will not work.
- A complete reinstall of the Capacity Manager or Change Manager client is needed after registration of the license keys on the InfraStruXure Central Server

Requirements for running the Capacity Manager client or the Change Manager Client on a desktop or laptop computer:

### Minimum System Requirements:

- Computer & Processor: 1.8 GHz Intel Pentium Mobile CPU
- Hard disk: 300 MB free hard disk space for installation.
- Memory: 1 GB Ram
- Display: 1024x768 screen resolution with 16 million colors
- Operating System: MS Windows 2000 Service Pack 4  
MS Windows XP Pro Service Pack 2  
MS Windows Vista
- Browser: Firefox, Opera, or Internet Explorer (v6.0 and up)

To get started with the Installation of the Capacity Manager client, the Change Manager client or the Change Manager Mobile client, please use your browser to access the InfraStruXure Central server. Enter the IP address of the InfraStruXure Central server in the address field of your browser, open the link to the appropriate version of Capacity Manager or Change Manager and follow the installation instructions.

When installation has been completed, open the Capacity Manager or Change Manager client and use the available tutorials to get started.